





 **AcoustiSlat**

Installation Guidelines

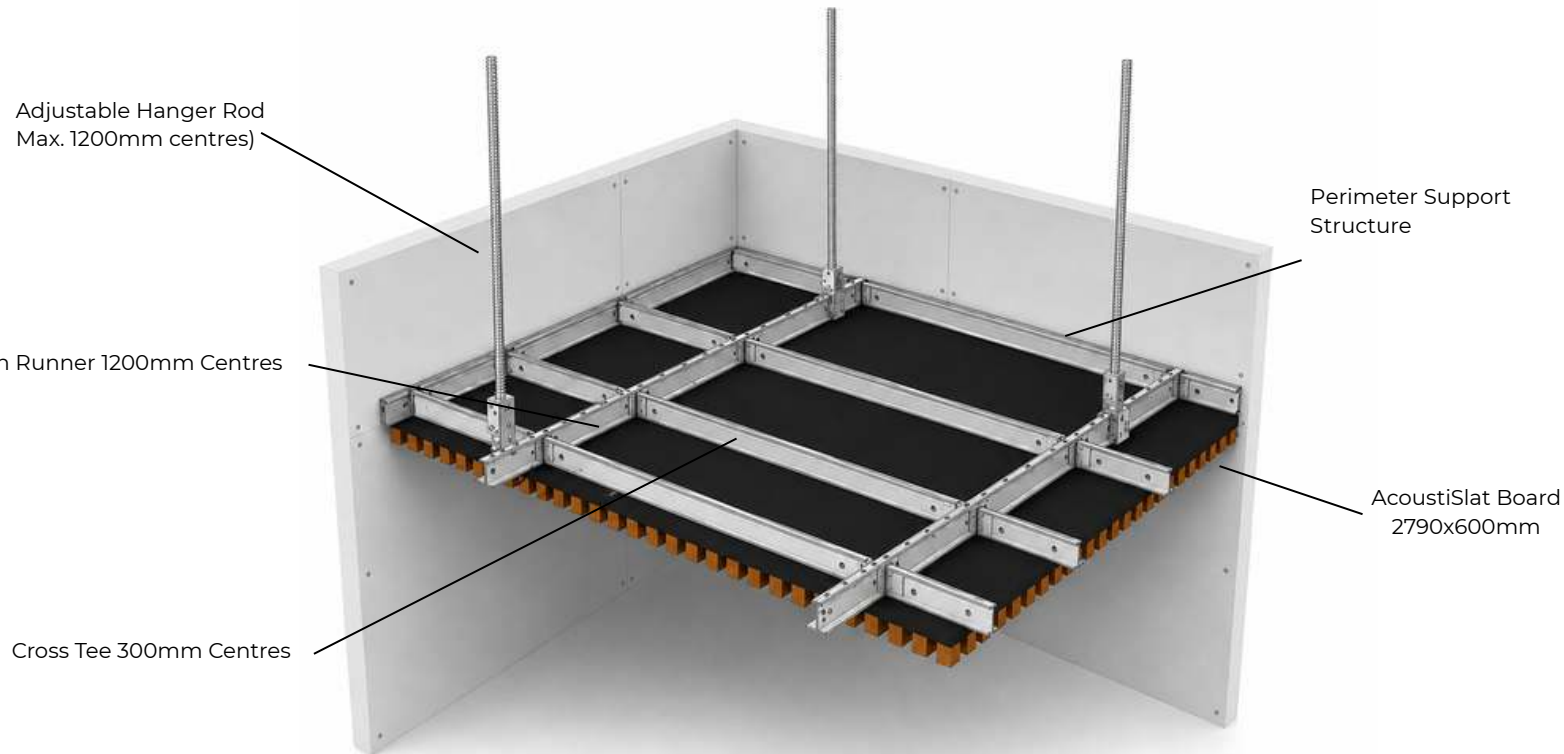

AcoustiSlat Board

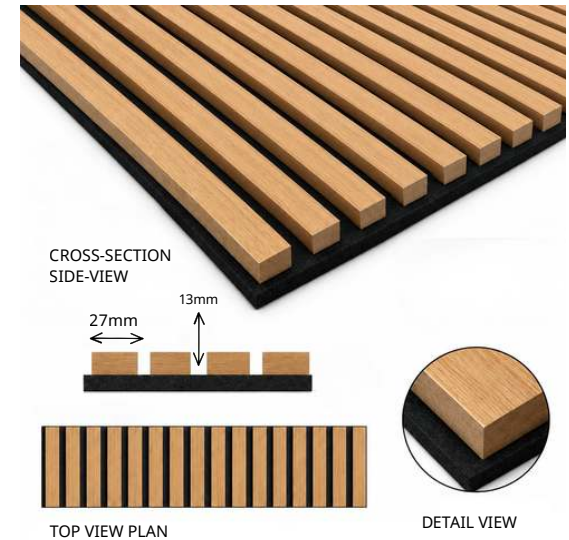

WOOD-LOOK SLAT ACOUSTIC PANEL

SPECIFICATIONS

Board Size: 2790x600mm

Slat Finish: Natural Wood Look, Veneer, Lacquered

Slat Width: 27mm


Slat Gap: 13mm

Backing: Black PET


Components



AcoustiSlat Board
2790x600mm

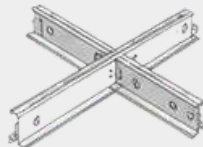

Main Runner

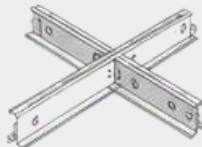

Cross Tee



Adjustable Hanger



Wall Angle
Perimeter Trim

01

Install Wall Perimeter Trim level around the room

02

Fix Main Runners at 1200mm centres.

03

Install Cross Tees at 300mm centres

04

Suspend Framework using Adjustable Hanger Rods or suitable rigid hanger

05

Fix AcoustiSlat board to the grid with 25mm black phosphate drywall screw - 4 rows of screws along length of board spaced at 300mm

AcoustiSlat Board
2790x600mm



Mounting Adhesive Gun







Screw Driver




Wood Screws




Hardware Items Required For Installation

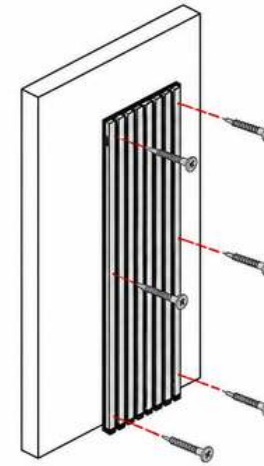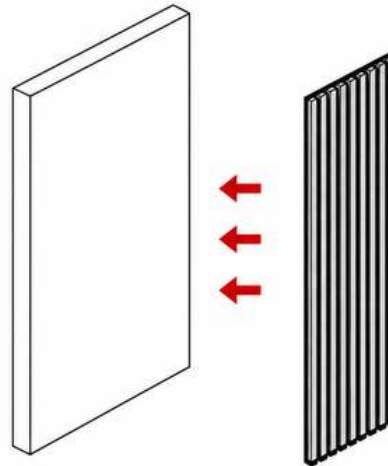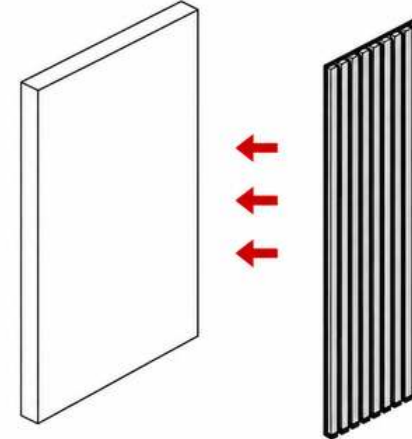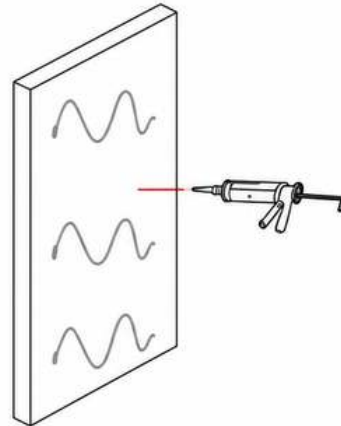

AcoustiSlat Board

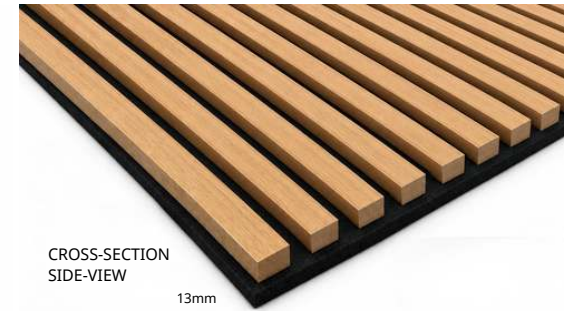

CROSS-SECTION
SIDE-VIEW



TOP VIEW PLAN



DETAIL VIEW

WOOD-LOOK SLAT ACOUSTIC PANEL

SPECIFICATIONS

Board Size: 2790x600mm

Slat Finish: Natural Wood Look, Veneer, Lacquered

Slat Width: 27mm

Slat Gap: 13mm

Backing: Black PET

System 1 - Adhesive Installation

- 01 Apply construction adhesive to the back of the board
- 02 Press board firmly onto the wall.
- 03 Ensure board is level and aligned
- 04 Hold in place until adhesive sets as per manufacturer instructions.

Notes

For best results, use construction adhesive suitable for vertical applications

System 2 - Screw Fix Installation

- 01 Position the board on the wall in the desired location
- 02 Screw fix through black pet backing in between the slats
- 03 Ensure board is level and aligned



Contact

JHB

TEL: +27 11 786 5762

Email: sales@owa.co.za

CPT

TEL: +27 21 531 7511

Email: info@owacape.co.za

DBN

TEL: +27 31 564 8726

Email: sales@owa.co.za